



SERVICE INSTRUCTIONS

for the ST06SQ7V

REPLACEMENT VIAL SERVICE KIT

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	-----	#4-40 Flat Hd. Screw	(2)
2	-----	Cover Plate	(1)
3	-----	Vial	(1)
4	ST06SQ7V	Replacement Vial Service Kit	(1)


To **remove** vial (3)

1. Remove the two screws (1).
2. Pull cover plate (2) away from the base.
3. Pull vial (3) away from the base.

To **install** vial (3)

1. Place vial (3) into the base.
2. Attach cover plate (2) to the base.
3. Install screws (1) through the cover plate to the base and tighten with 5 in-lbs of torque.

To order a replacement vial kit, submit a warranty claim on our website at www.stiletto.com/warranty

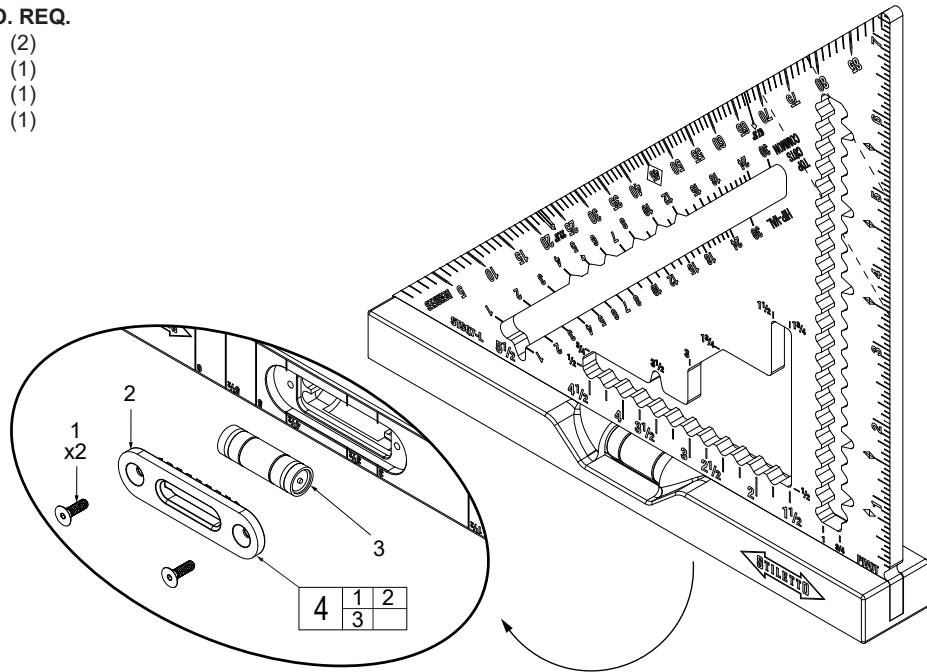

STILETTO® TOOLS

13135 West Lisbon Road • Brookfield, WI 53005
1-800-987-1849 www.stiletto.com